


Электрическая беговая дорожка

РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ

Модель: DFC Premio

Артикул: T730

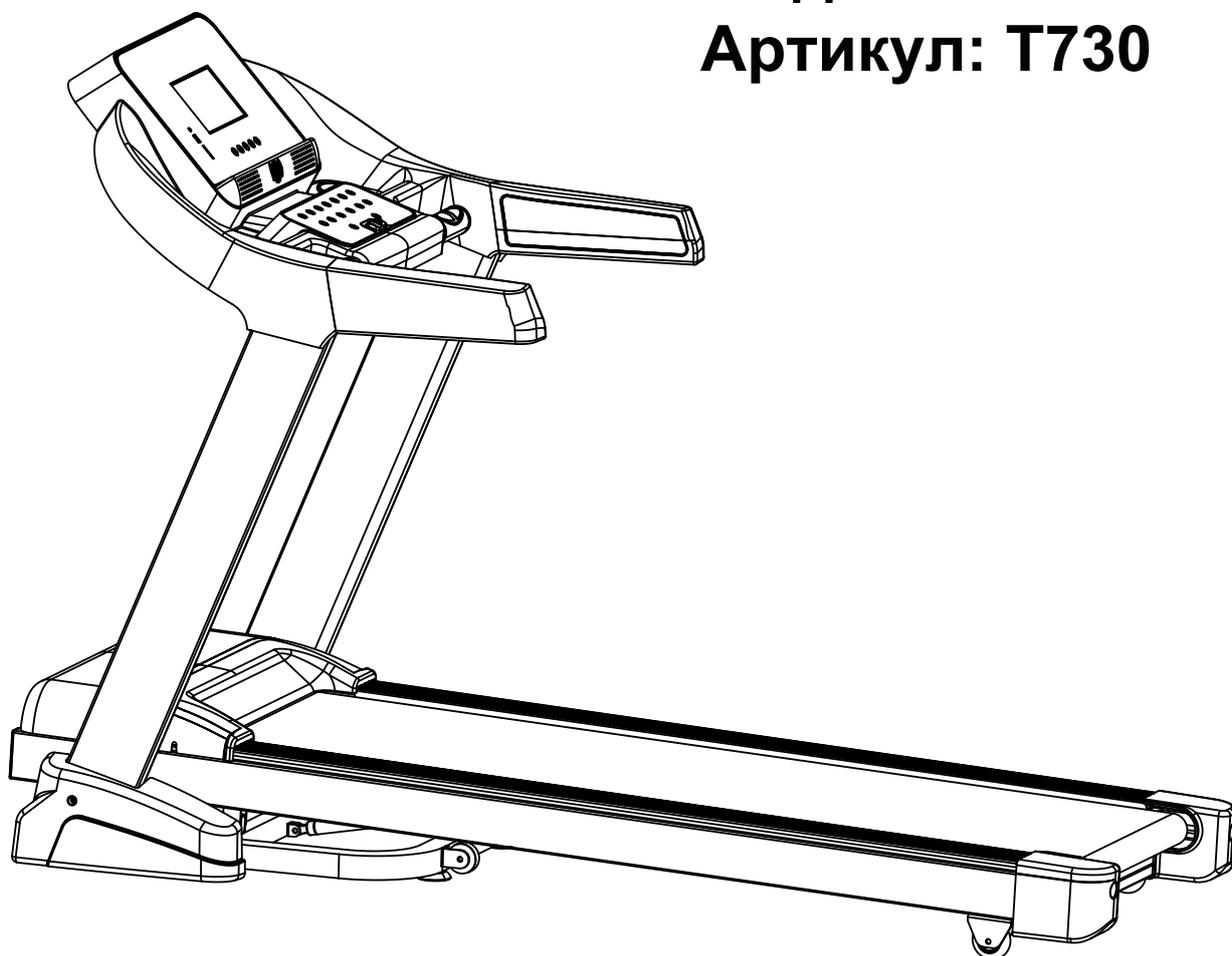

EAC

ВАЖНО!

Перед началом эксплуатации устройства, ознакомьтесь со всеми инструкциями. Сохраните данное руководство для дальнейшего использования. Спецификация данного продукта может отличаться от фото и может изменяться без предварительного уведомления.

Safety Precautions

Please keep this manual for future reference.

1. Before commencing assembly and use of your new Treadmill, carefully read the instruction manual to understand the information provided. The correct installation, maintenance and use of your Treadmill is important to ensure you get the safest and most effective fitness workout.
2. Please ensure the equipment has been assembled according to the assembly manual.
3. If you are over 45 years old, have health or medical problems and/or this is your first time exercising in over 12 months, please consult your local Doctor or Medical Professional before use.
4. Should you experience any of the following symptoms including: headache, chest tightness, irregular heartbeat, shortness of breath, dizziness, nausea or any sharp muscle or joint pain, immediately stop training and consult your Doctor or Medical Professional.
5. Ensure that young children and pets are kept away from the equipment to prevent injury, the equipment is for adult use only.
6. The equipment should be placed on a hard, flat surface and at least 0.5 meters away from any obstacles.
7. Before using the equipment, please check all nuts and bolts of the Treadmill are tightened securely.
8. Do not place the treadmill in rooms or areas that are exposed to high levels of moisture i.e. outside, near heated indoor pools/spas, non-insulated garages or rooms.
9. It is strongly recommended you wear appropriate clothing and footwear when using your Treadmill for your own personal comfort.
10. The equipment is not suitable for use as a medical device.

Directions for Use

In order to avoid an accident, please ensure you have the treadmill safety key securely attached to your clothing. In the event, that you accidentally trip or slip whilst walking or running on the treadmill, removing the safety key from the console will ensure the power is paused to the motor bringing the belt to a stop. Re-attach the safety key to commence your workout.

When exercising on the treadmill concentrate on looking straight ahead and not at your feet, to avoid any risk of tripping or falling. Increase the speed gradually allowing yourself to adapt to the speed setting before making any further speed adjustments.

To pause or stop your treadmill use the emergency stop button or safety key when necessary.

Once you have completed installation of the treadmill and the motor cover is securely on, you may plug in the power cord. It is recommended you use a good quality surge protector device.

1. Position the treadmill on a clean and level surface, close to a dedicated wall socket power point. A rubber floor mat is recommended to assist with maintenance and protection of your floor.
2. For your safety, never start the treadmill while you are standing on the running belt. Place your feet on either side of the running belt side rails and press the start button. Increase the speed gradually to the desired speed level before standing on the belt surface.
3. Wear appropriate clothing and footwear when exercising on the treadmill. Do not wear long, loose fitting clothing that could become caught in any of the moving parts of the treadmill.
4. Always wear the safety key attachment.
5. The motor cover should never be removed while in use. A qualified electrical technician must be in attendance should any maintenance work need to be carried out. Always unplug the power cord should the cover ever need to be removed for maintenance reasons.
6. Young children should be kept away from the treadmill whilst it is in use to avoid injury and safety concerns.

Assembly Instructions


We recommend 2 people assist in assembling this unit. Place all parts of the Treadmill in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed. Before you start installation inspect and prepare all parts and screws featured in this manual. When you open the carton, you will find the following parts.




(S1) #5/#6 Allen Wrench
each 1 PC




(S2) Hex Bolt M8x50mm
teeth 12 mm
4 PCS

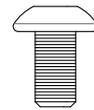


(S3) Hex Bolt
M8x16mm
6 PCS

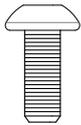


(S4) Philips Head Screw
M5x25mm
2 PCS

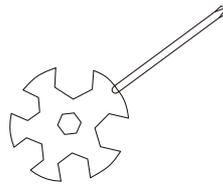


(S5) Multi Hex Tool with
Philips Screwdriver
1 PC

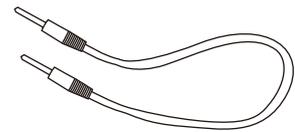


(S6) Audio Cable
1 PC

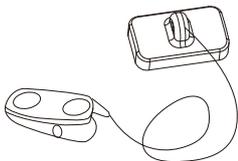


(S7) Safety Key
1 PC

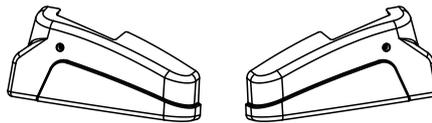

(S8) Covers
2 PCS

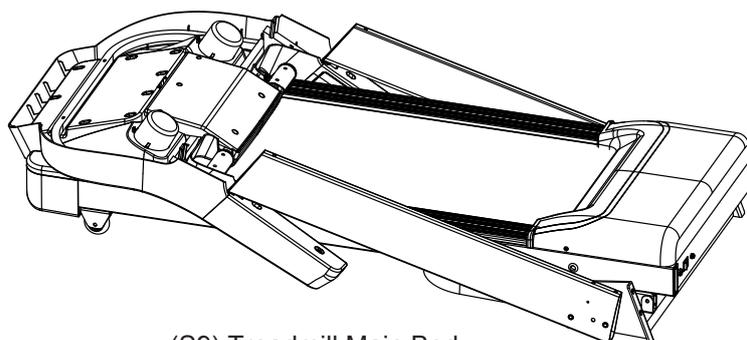


(S9) Treadmill Main Body
1 PC

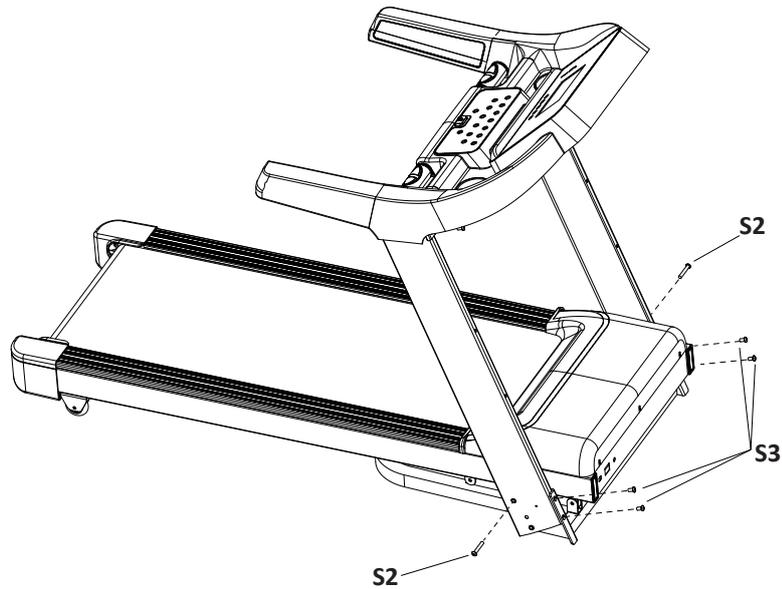

Step 1 Installing the upright frame


Upright and secure the upright frame into the stabilizer with Hex Bolt M8x50mm teeth 12mm (S2) and Hex Bolt M8x16mm(S3) back sides.

Important : While assembly, it need two person work together. One people hold the computer and another one tighten the bolts with the Allen Wrench (S1) provided.

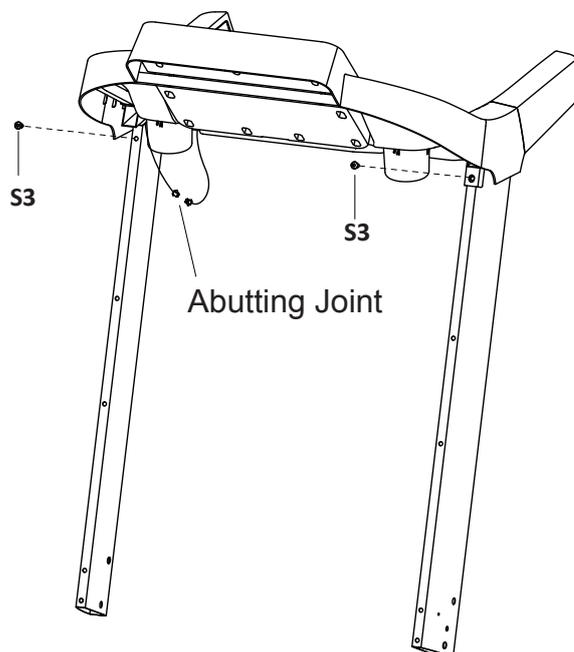

Step 2 Installing the Computer


Connect the Signal Wire from the computer to the Signal Wire from the upright frame first . Then, secure the computer into the upright frame with two Hex Bolt M8x16mm (S3) back sides. Tighten the bolts with the Allen Wrench (S1) provided.

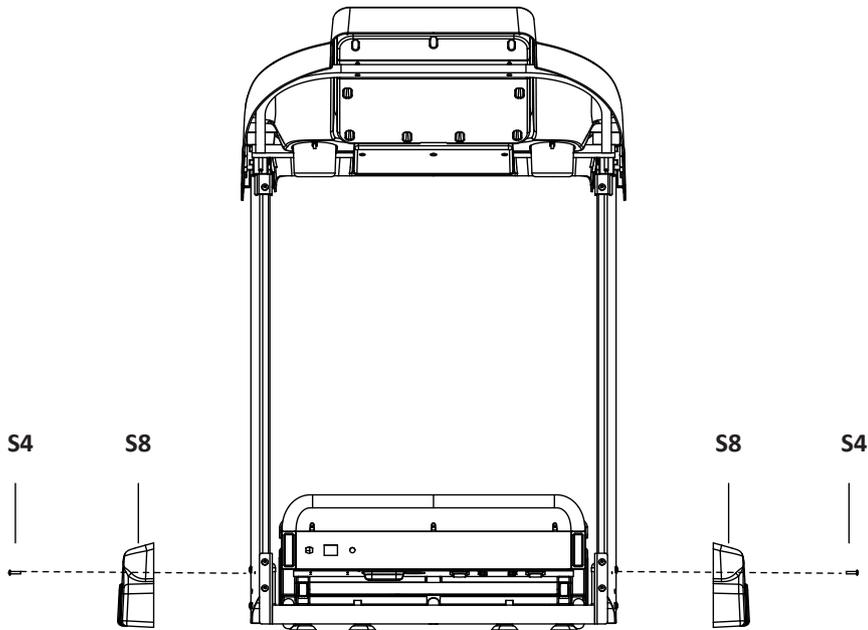

Step 3 Installing the Covers

Secure the cover (S8) to the upright frame with one Hex Bolt (S4) both sides, tighten the bolts with Multi Hex Tool with Philips Screwdriver (S5) provided.


EMERGENCY STOP

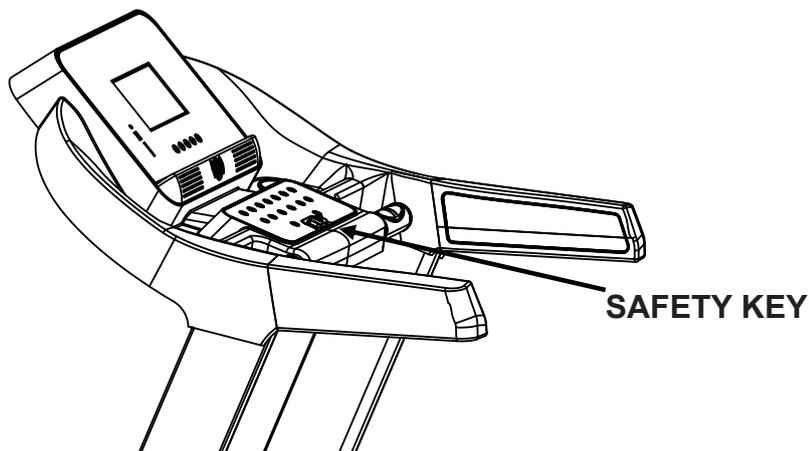

Before beginning a workout session ensure that the Safety Tether Key is properly placed onto the Computer Console and the Safety Clip is securely attached to an article of your clothing. If you fall the clip will pull out the SAFETY KEY from the Computer Console and the running belt will stop immediately for emergency stop, helping to prevent injury.

Replaced the Safety Tether Key onto the Computer Console. Press the START button to begin exercise again.

Operation Instructions

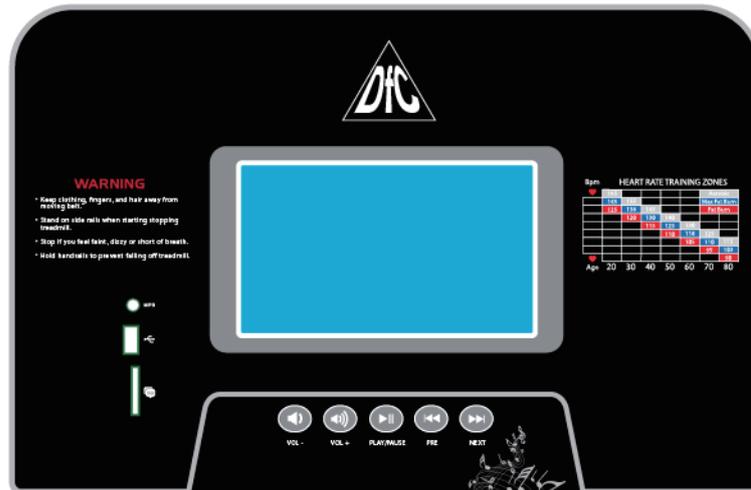

Display Functions

TIME	No Set Target Time - TIME will count up from 00:00 to maximum 99:00 with each increments is one minute. Using Set Target Time - TIME will count down from Preset Value . Each preset Increment is one minute between 5:00 to 99:00 minutes.
SPEED	Display current training speed from 1.0 to a maximum of 20.0 km/h.
DISTANCE	No Set Target Distance - DISTANCE will count up from 0.00 to a maximum of 99.5km with each increment 0.1 KM. Using Set Target Distance - DISTANCE will count down from preset Value. Each preset increment is 0.5 KM between 0.5 to 99.5.
CALORIES	No Set Target Calories - CALORIES will count up from zero to maximum 995 with each increment 1 cal. Using Set Target Calories - CALORIES will count down from preset value. Each preset increment is 5 cal from 10 to 995 cal.
PULSE	Hold the hand sensor tight and the console will detect your pulse signal. When monitor is reading your heart tare signal, the HEART SYMBOL will flash on the console.

Function Buttons

1. MODE: To confirm all settings and to enter exercise modes.
2. Speed +: To select training mode and adjust the function value up.
3. Speed -: To select training mode and adjust the function value down.
4. START/STOP: To start or stop your workout.

POWER ON:

Plug the main power cord in a grounded wall outlet, please make sure the power matched. Ensure the 'Safety Key' is in the correct position and inserted properly in the console.

QUICK WORKOUT:

User can start a workout by pressing the 'Quick Select' button for either Speed or incline.



There are 3 'Quick Select' buttons for both Speed and Incline – 6km/h to 18km/h for speed options and 2% to 8% for Incline options.

You can use Quick Workout (the speed and incline) during your workout, press 'START' to beginning your workout.

If you need to stop the treadmill during your workout, press 'STOP' or pull out the Safety Key.

PROGRAM MODE


This treadmill console has 12 Preset Workout Programs to choose from (see below for breakdown of each Program). When in PROGRAM mode, use PROGRAM button to select your chosen workout – P1 TO P12. Press START button to confirm and start your workout.

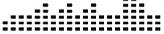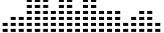P1		WARM-UP	P7		TIME GOAL
P2		RANDOM	P8		DISTANCE GOAL
P3		5K RUN	P9		CALORIES GOAL
P4		COMPETITION	P10		MOUNTAIN CLIMB
P5		WEIGHT - LOSS	P11		BEACH SPORT
P6		HILL	P12		CROSS COUNTRY RACE

MUSIC

The computer with MP3 player, USB Port and SD Port, This program design support user to play music during training.

Moving & Storage Instructions

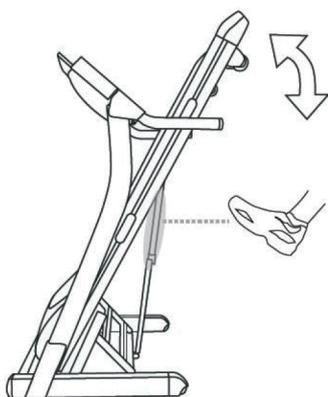


Folding away your Treadmill

- A.) Turn off the treadmill, switch off at the main power switch and pull out the plug.
- B.) Lift the treadmill deck up towards the main console. You should feel the treadmill gas spring system engage.
- C.) To lower the treadmill deck, press the gas spring system in with your foot to disengage the lock. The treadmill deck can now be lowered to the ground.


Moving your Treadmill

The treadmill can then be moved by tilting the treadmill deck towards you onto its transportation wheels.
(Please ensure the power cord cable has been disconnected from the treadmill before attempting to move it).

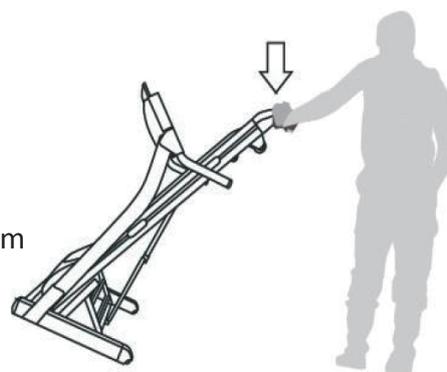


BELT ADJUSTMENT:

- Place treadmill on a level surface.
- Run the treadmill at 6-8km/h.
- If the belt has drifted to the right, turn the right bolt clockwise a 1/2 turn and turn the left bolt anticlockwise a 1/2 turn (Picture C).
- If the belt has drifted to the left, turn the right bolt anticlockwise a 1/2 turn and turn the left bolt clockwise a 1/2 turn (Picture D).

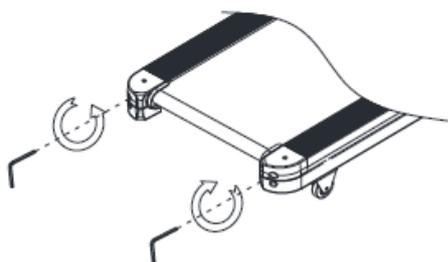

PICTURE C

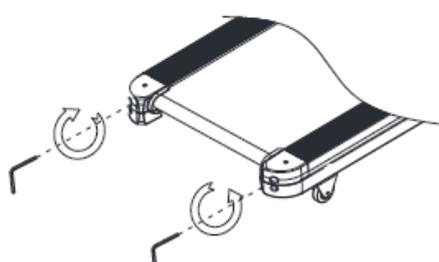


PICTURE D

- Test for at least 15 seconds at 4km/h (check and adjust a further quarter or half turn until the belt is centred).

NOTE: The running belt should not be tightened too hard as this can cause noise and damage the machine.

Warm-Up Exercise

Warm up exercise is important in preparing the muscles for activity whilst minimising the risk of injury. You may choose to warm up with a light/brisk walking pace for 5-10 minutes before stopping and performing some simple stretches. (As shown in the pictures below)

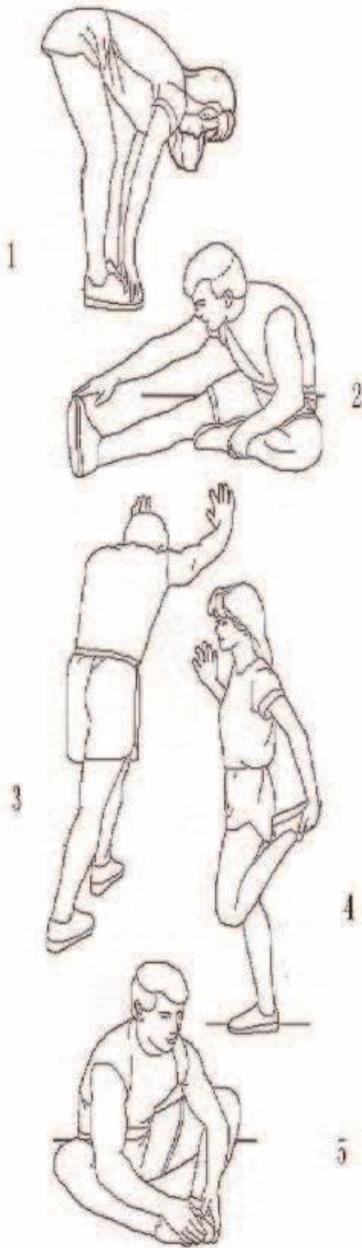

1. Hamstring Stretch (Standing) - Keep your knees slightly bent and slowly lean forward, back and shoulders relaxed, reaching towards your toes. You should feel the tension and slight discomfort in your hamstring muscles. Hold for 15 - 20 seconds. Repeat 2-3 times.

2. Hamstrings Stretches (Seated) - Sitting on the floor preferably on a mat, put one leg straight, the other inward and close to the inside of the straight leg. Lean forward from the hips, reaching towards your toes. Hold for 10-15 seconds, and relax. Repeat 3 times for each leg (See picture 2).

3. Calf Stretches - Standing with two hands on the wall or tree, one leg behind. Keeping your legs straight and the heel on the ground, lean forward towards the wall or tree. Hold for 10 -15 seconds, and relax. Repeat 3 times for each leg (See picture 3).

4. Quadriceps Stretches - Keeping your balance with your left hand holding onto a wall or stationery fixture, grasp your right foot with your right hand and stretch your right heel toward your buttocks slowly, until you feel the stretch in the front of your thigh. Hold for 10 - 15 seconds, and relax. Repeat 3 times for each leg (See picture 4).

5. Sartorius (Inner Muscles of the Thigh) Muscle Stretches - Sitting down with the soles of your feet or shoes together and your knees positioned outward. Pull your feet towards your groin until you can feel the stretch. Hold for 10 -15 seconds, and relax. Repeat 3 times (See picture 5).

Maintenance Instructions

WARNING:

Before cleaning or carrying out any maintenance on your treadmill, ensure the power is turned off and the power cord removed from the plug socket.

At least once a year, the motor cover on your treadmill should be removed and any dust or debris vacuumed up to maintain the smooth operation of the motor and drive system.

CLEANING:

General cleaning the unit will greatly prolong the treadmills working life.

Keep the treadmill clean by dusting regularly. Be sure to clean the exposed parts of the deck surface on both side of the walking belt and also the side rails. Make sure the soles of your shoes are clean, this reduces the build up of foreign material underneath the running belt. The top of the belt can be cleaned with a slightly damp cloth. Be careful to keep liquid away from the electrical components and underneath the running belt.

The belt/ deck friction may play a major role in the function and life of your treadmill, thus requiring periodic lubrication. We recommend a periodic inspection of the deck.

We recommend lubrication of the deck according to the following timetable

- Light user (less than 3 hours/ week) annually
- Medium user (3-5 hours/ week) every six months
- Heavy user (more than 5 hours/ week) every three months

Treadmill lubricating oil can be purchased from your nearest Fitness store or our Service Department.

1. In order to maintain and prolong the working life of your treadmill, we suggest you power off the treadmill for 10 minutes after every 2 hours of running use.
2. A loose running belt may slip when you are running and may require a small adjustment; if the running belt is over tightened it can affect the performance of the motor and add extra wear to the rollers. For ideal tension, the running belt can be lifted 50-75mm from the central part of the running deck.

